




# INSTALLATION INSTRUCTIONS T-PMPI-270-PC

CGK630U, CGK630UA, CGR630U, CGR630UA, CGJxxxU, CGJxxxUA, RGSxxx, RGSxxxA


1

CGK630U, UA  
CGR630U, UA  
CGJxxxU, UA

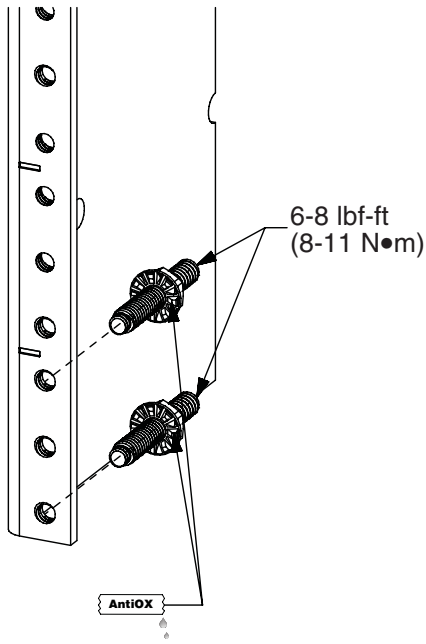


2

CGK630U, UA  
CGR630U, UA  
CGJxxxU, UA

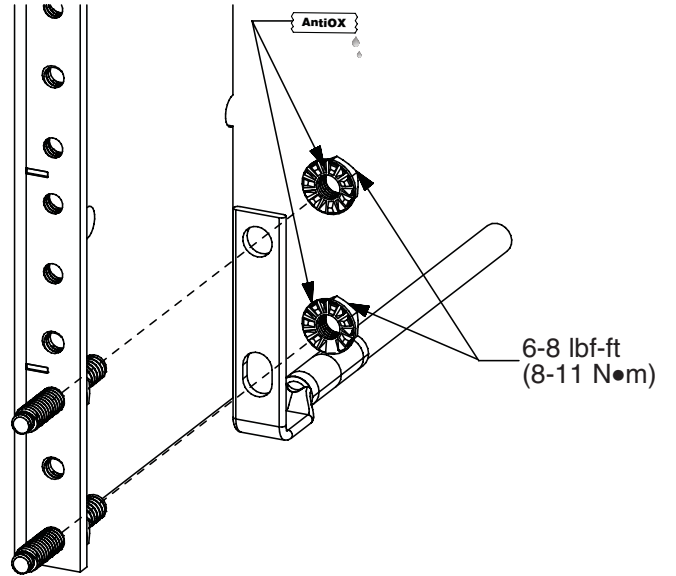


3

CGK630U, UA  
RGSxxxx, A

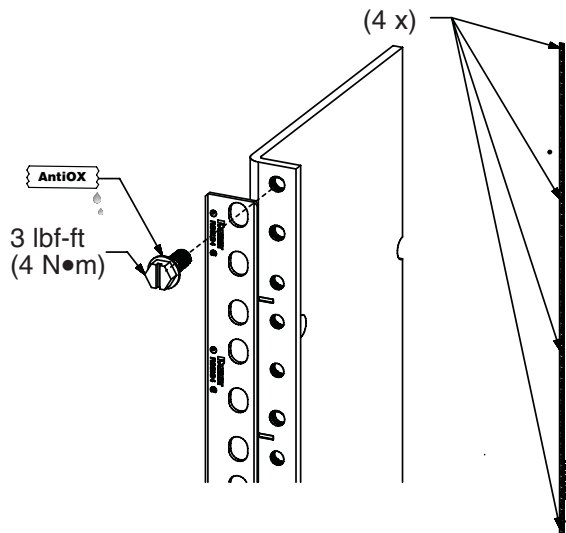

4


CGK630U, UA  
RGSxxxx, A

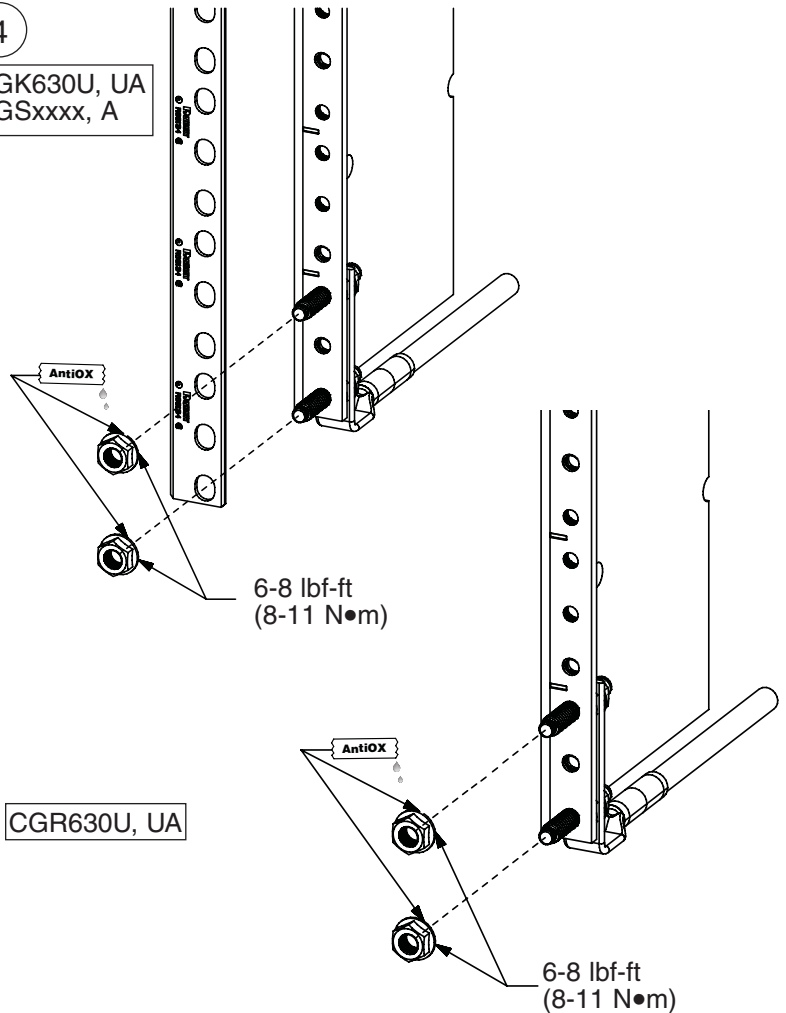


# INSTALLATION INSTRUCTIONS T-PMPI-270-PC

5

CGK630U, UA  
RGSxxxx, A

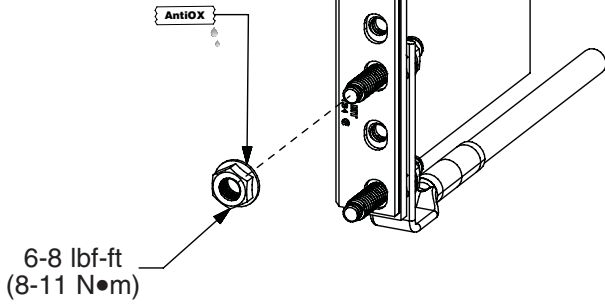


CGR630U, UA

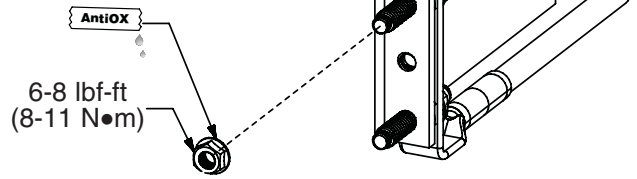


6

CGK630U, UA

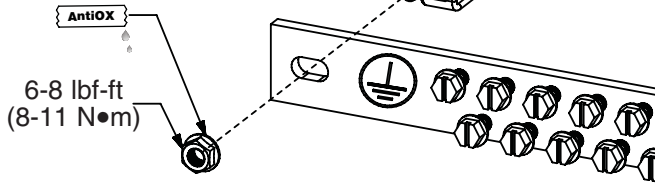


CGR630U, UA

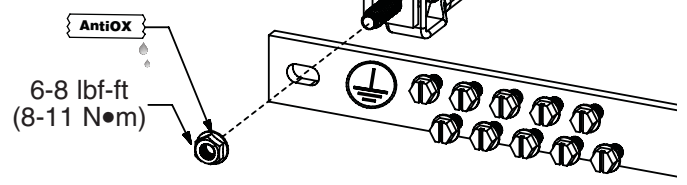






7

CGK630U, UA

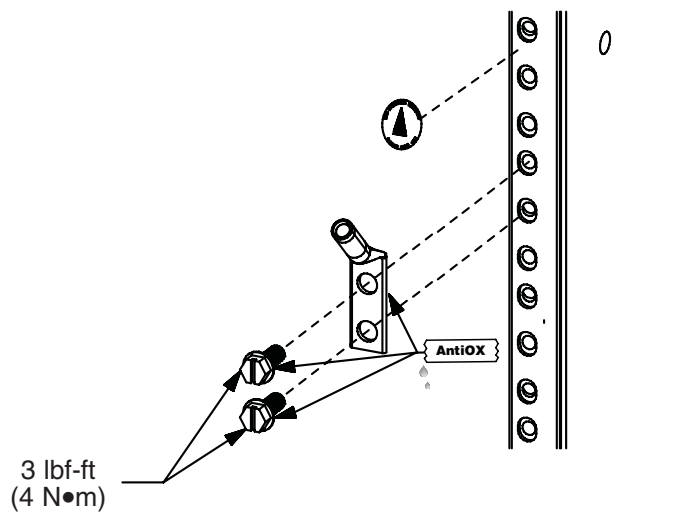

# INSTALLATION INSTRUCTIONS T-PMPI-270-PC


CGK630UB, CGR630UB, CGJxxxUB, CGJxxxUC, RGSxxxxC, THSK4, THSK8

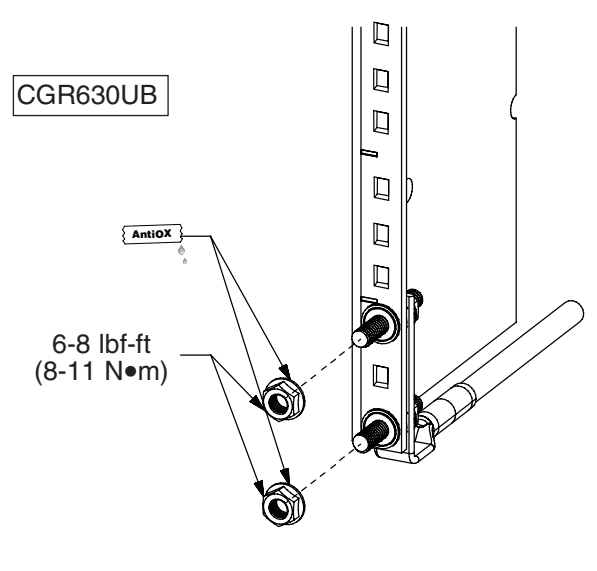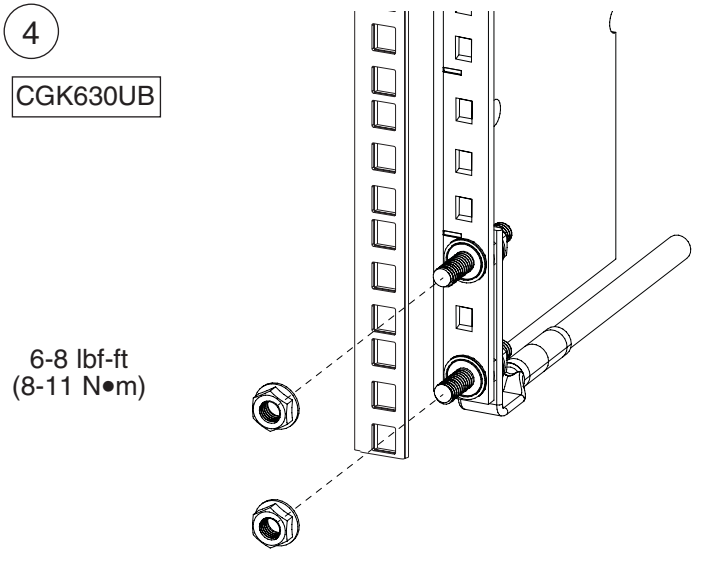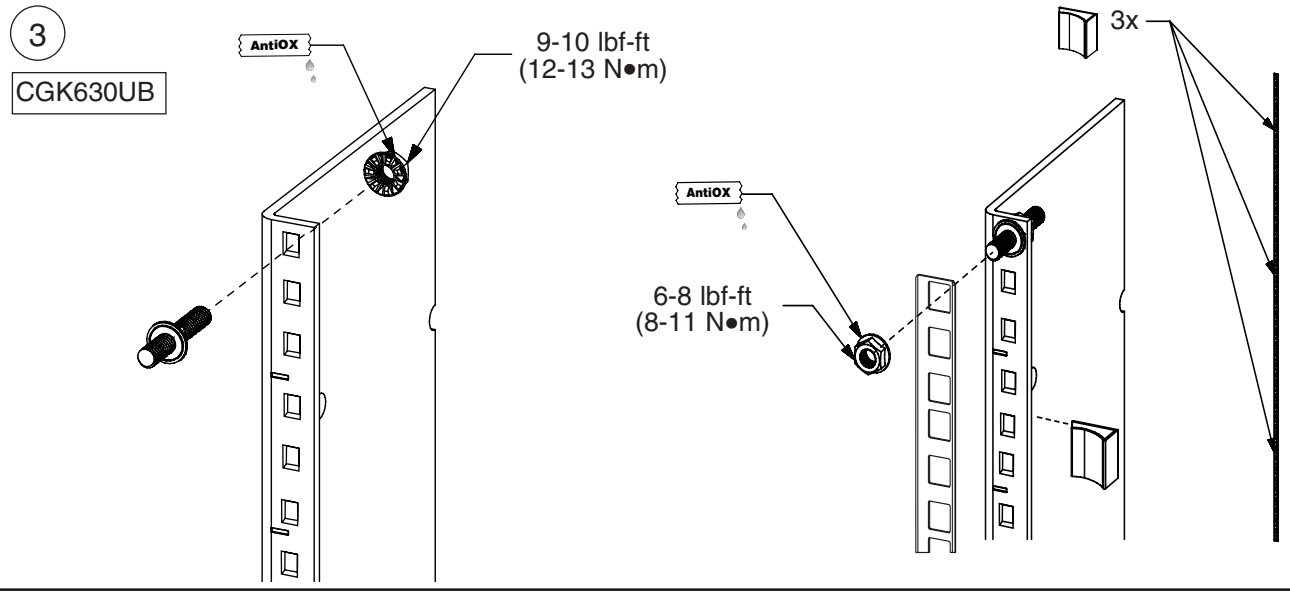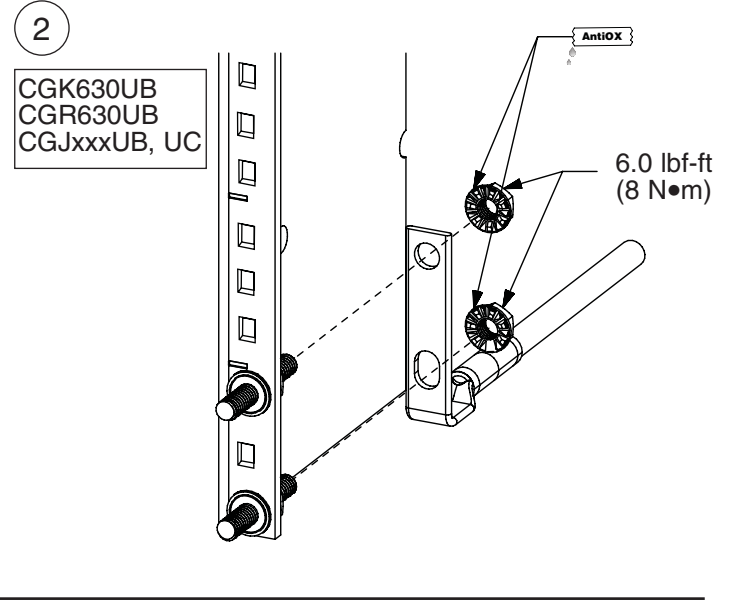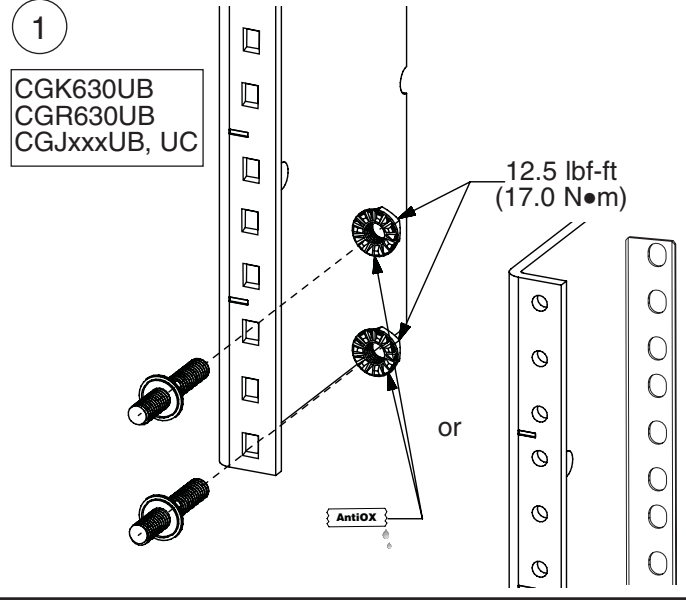


# INSTALLATION INSTRUCTIONS T-PMPI-270-PC

5

CGK630UB

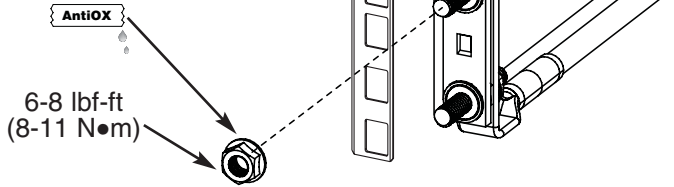


CGR630UB

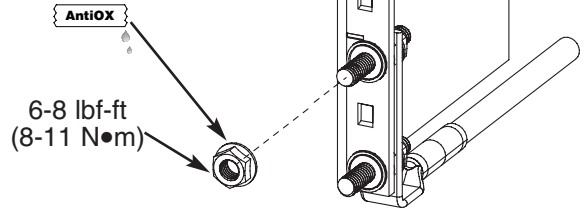


6

CGK630UB


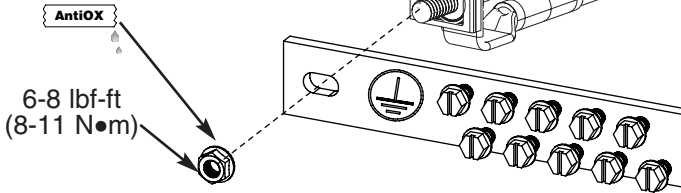


CGR630UB

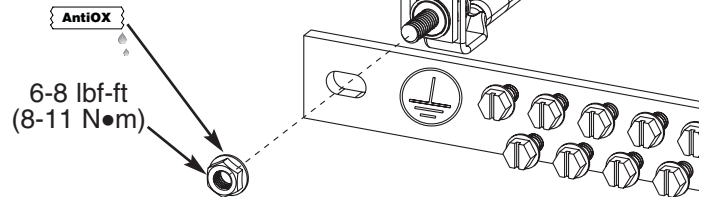


7

CGK630UB

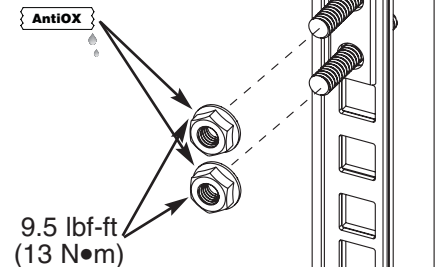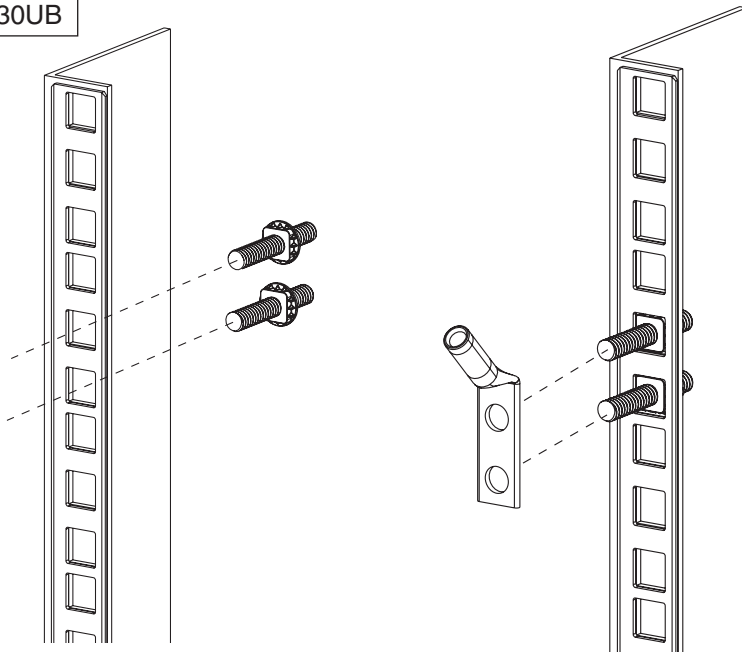

# INSTALLATION INSTRUCTIONS T-PMPI-270-PC

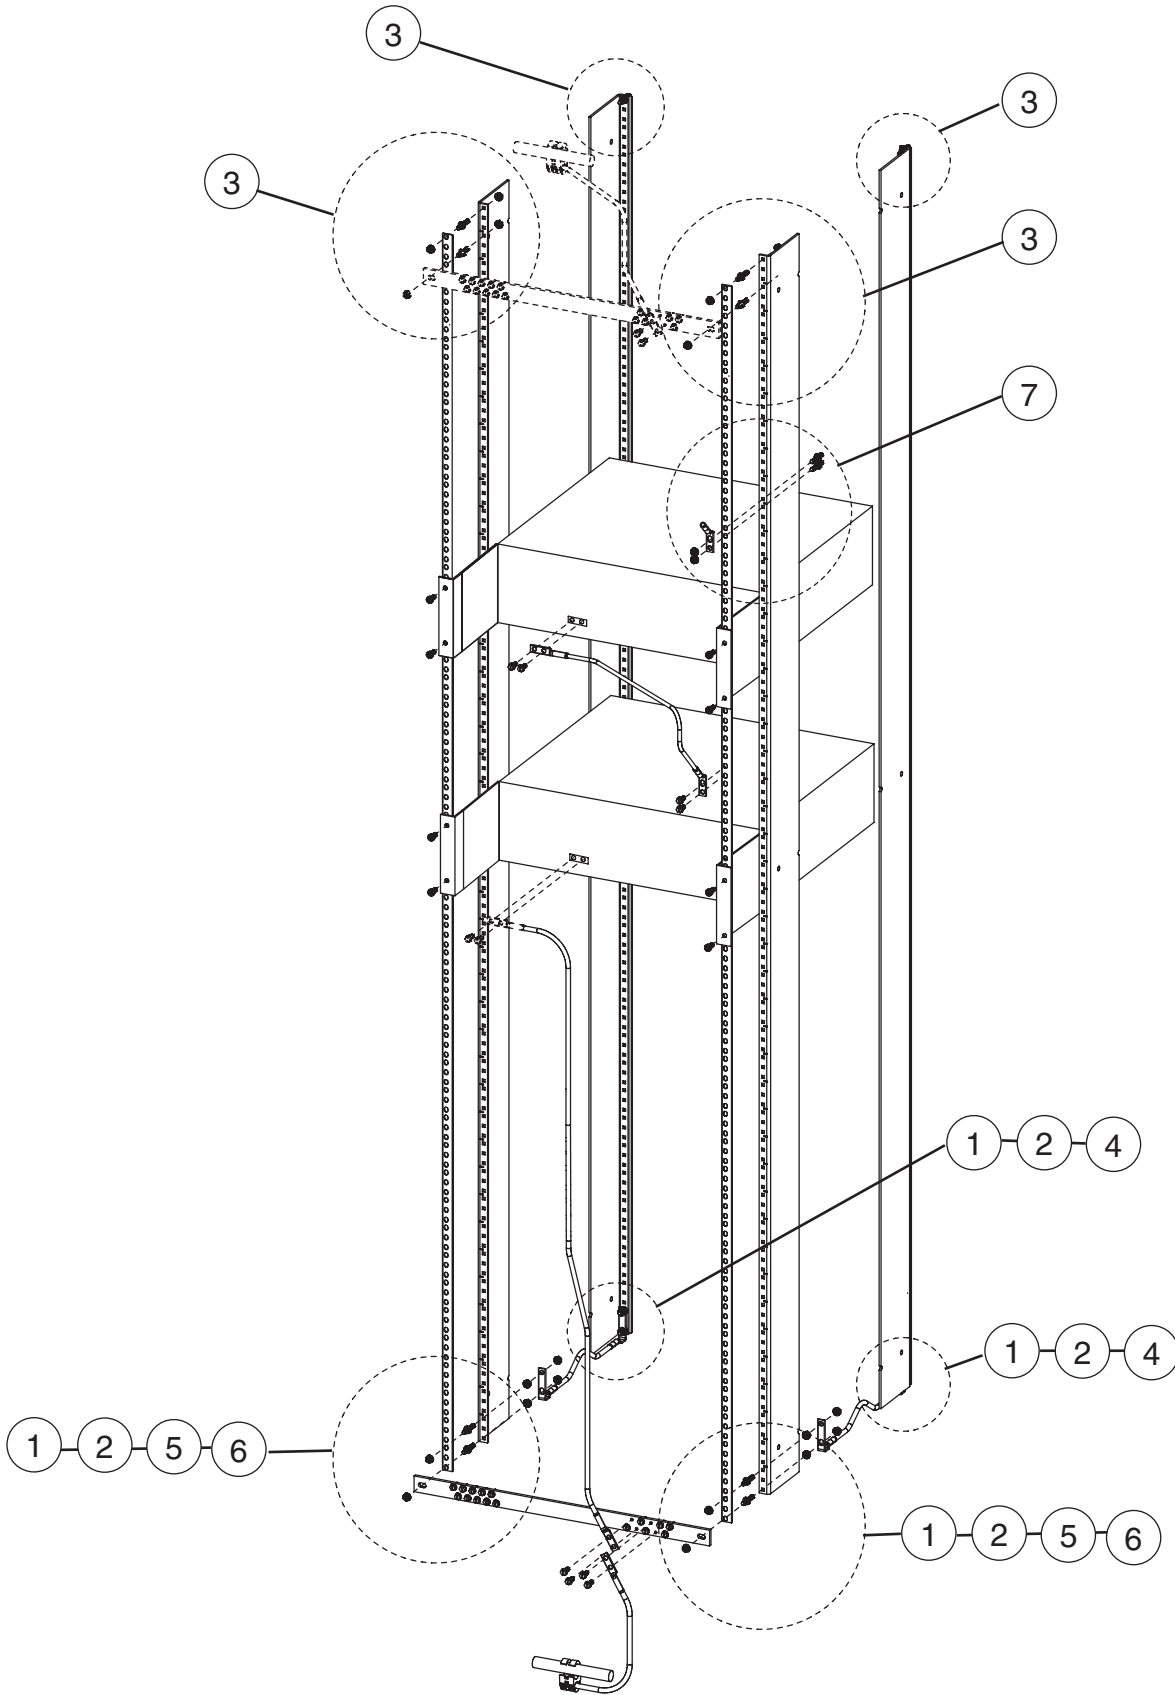

For Instructions in Local Languages  
and Technical Support:

[http://www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)



[www.panduit.com](http://www.panduit.com)

E-mail:  
cs@panduit.com

Fax:  
(815)485-5839